


**PLA20753
CARECALL CALL POINT GASKET
INSTALLER QUICK GUIDE**

All information within is intended for use by accredited Miracle Electronics systems installers only. It is only guaranteed relevancy at the time of publishing and is subject to change without notice. Contact Miracle Electronics for the latest documentation. Copyright Miracle Electronics Pty Ltd. 2024.

IMPORTANT

- ✓ DO install gaskets on a flat surface with no warping, seams, or imperfections to the wall.
- ✓ DO securely fit Gaskets to Call Points, ensuring any protuberant parts fill the contours and crevices of the Call Point base plate.
- ✓ DO only install Call Points fitted with Gaskets to standard flush-boxes, using the screw apertures provided as part of the gasket.
- ✓ DO ensure cavities are only exposed to the extent that reveals the faceplate screw terminals and the perimeter of the flush-box. Refer to the template for guidance.


- ✓ DO ensure all aperture bungs provided are fitted securely to the correct aperture.
- ✗ DO NOT fit gaskets across tile grouting.
- ✗ DO NOT puncture, tear, or pierce the gasket.
- ✗ DO NOT over-tighten faceplate screws when affixing.
- ⚠ CAUTION, correctly fitted Gaskets will not require any additional adhesives or sealants. Application of these chemicals may cause corrosion or make replacement/ removal difficult.

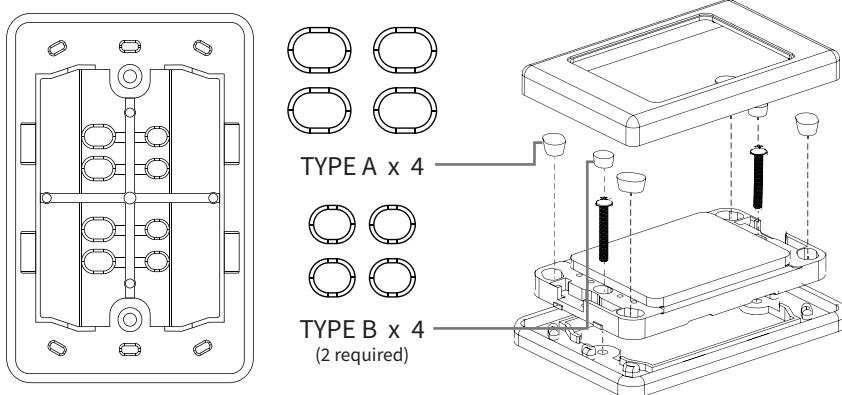

INSTALL GUIDELINES

- Using the template provided, expose the flush box from the wall with an appropriate cutting tool for the wall material. Be sure to remain central to the flush box.
- Gently relieve the gasket and bungs from inessential rubber netting. Take care when pulling these items apart so as to not damage essential pieces
- Unite the gasket and non-socket Call Point being installed, taking care to ensure the seal is complete and all contours meet securely.
- After cleaning the wall of any debris or dust and using a spirit level for guidance, affix the call point to the exposed flush box. Do not over-tighten faceplate screws, affix with drills, or impact drivers with unmanaged torque settings.
- Inspect the seal of the gasket against the wall, checking for imperfections. Ensure the call point has clamped securely against the gasket and nothing has come misplaced when affixing.
- Fit the 4 x Type A bungs into the corner screw apertures of the faceplate, the 2 x Type B bungs in the central screw apertures, and the call point faceplate surround. See the diagram for reference.

TEMPLATE

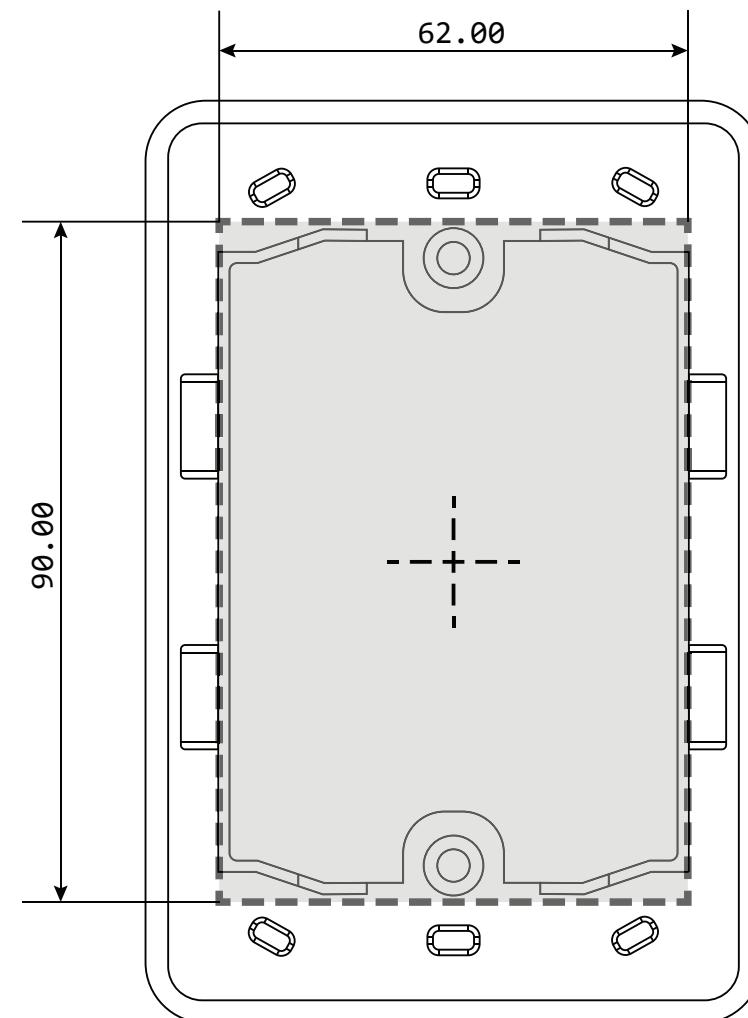

Please note, gaskets may be subject to shrinkage after mould injection and the dimensions may differ slightly to those shown in the diagram.