

CareCall4 Wet Environment Product Selection Guidelines



Call Point



Wet Environment
Button




Pull Cord



PLA20753 Gasket

Careful selection of alarm device placement is crucial when installing a nurse call system. CareCall systems offer a comprehensive range of products designed to enhance safety in moisture-prone environments.

For applications in bathrooms featuring showers, baths, or when installing devices near basins, include a PLA20753 gasket. Gaskets are unnecessary for devices installed in rooms with toilets as the sole fixture.

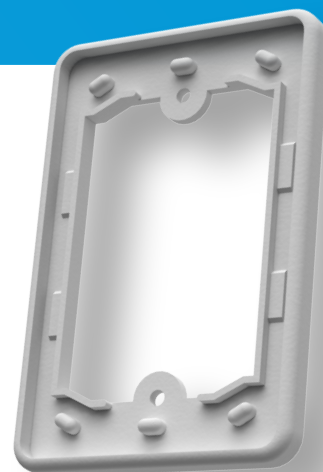



Wet Environment Buttons ●

💧💧💧 IP67

Areas that are exposed to the highest amounts of moisture can be kept secure with CareCall Wet Environment Buttons. Complete with status reassurance and fault detection indication, these are a perfect choice for shower, bath, and outdoor areas.



Pull Cords ●

💧💧 IP55

Bathroom ceilings are the ideal setting for CareCall Pull Cords. Available with red or green break-away cords that are easy to keep clean, pull cords provide peace-of-mind that an alarm can be raised at any height, from anywhere.



Call Points ●●

💧💧 IP55

Suitable for installation in areas with mild humidity and splash zones, CareCall4 Call Points belong at bathroom entrances and around toilets or basins. Pull Cords and Wet Environment Buttons must be provisioned by a CareCall4 Master Call Point for system uplink.



CARECALL
BY MIRACLE



Proudly made in NZ